
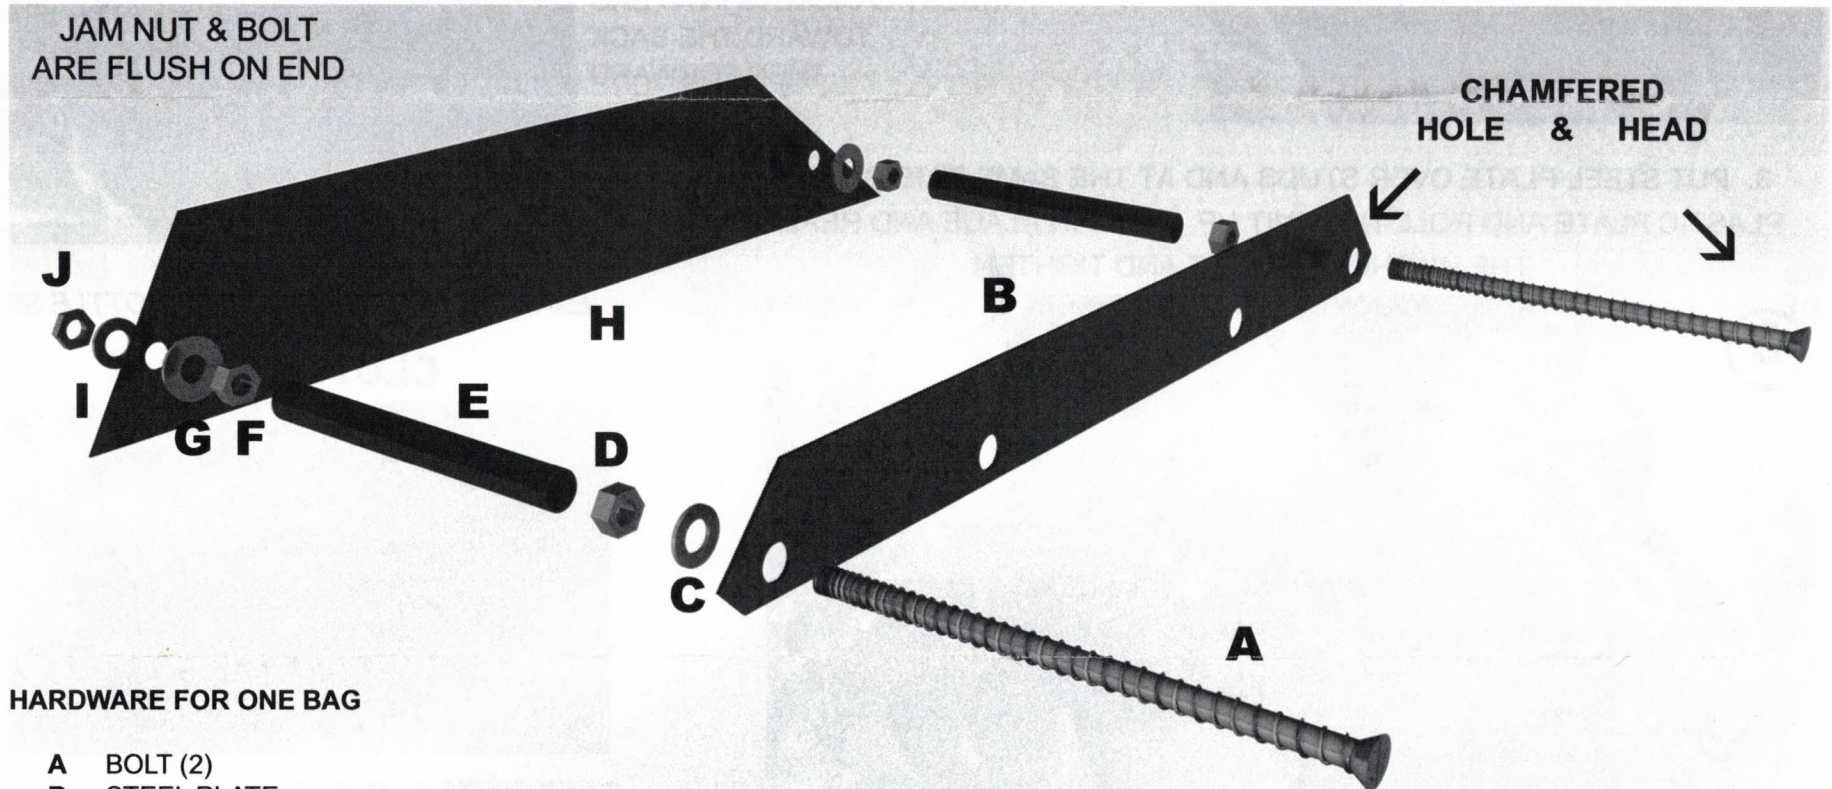


www.papabags.com
P.O. Box 1673
Medina, OH 44258
330-242-1588
Patent Pending

ASSEMBLY

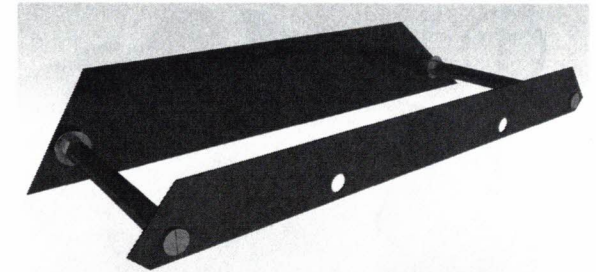


HARDWARE FOR ONE BAG

- A BOLT (2)
- B STEEL PLATE
- C SMALL WASHER (2)
- D NUT (2)
- E TUBE (2)
- F NUT (2)
- G BIG WASHER (2)
- H PLASTIC PLATE
- I SMALL WASHER (2)
- J JAM NUT (2)

1. SLIDE A INTO B CHAMFERED "HOLE"
2. PUT C AND D OVER A
3. TIGHTEN D ONTO A
4. SLIDE E OVER A
5. F AND G ONTO A
6. H OVER A - ADD I AND J
7. TIGHTEN J JAM NUT OR 1/2 NUT EVEN WITH END OF A
8. FINISHED AND INSTALL IN BAG


1

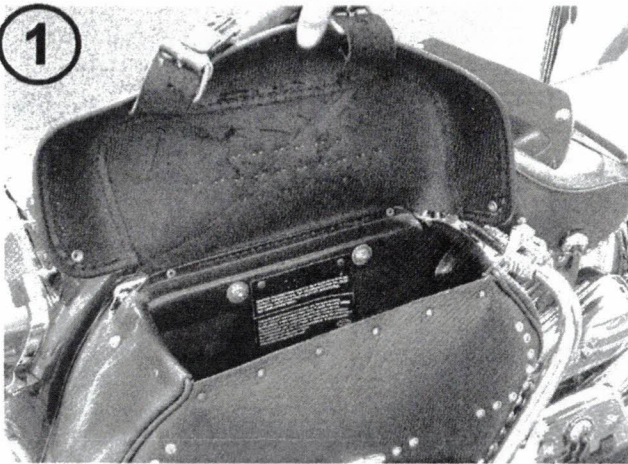

1. OPEN BAG LID
REMOVE 2 NUTS AND WASHERS

2. HOLD STEEL IN HAND
INSERT BRACKETS INTO BAG
TOWARD THE BACK
THEN FORWARD


2

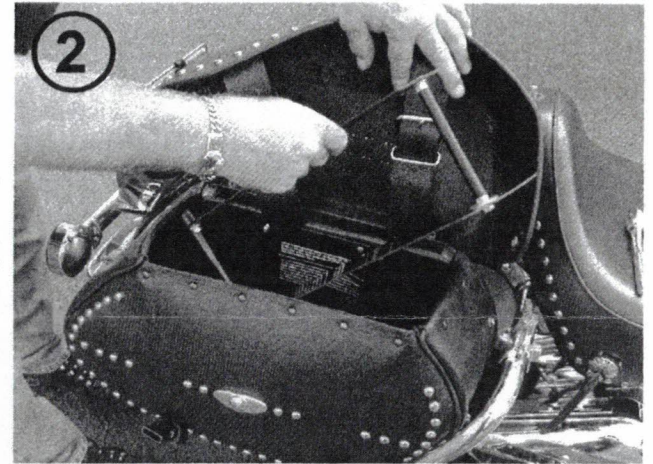

3. PUT STEEL PLATE OVER STUDS AND AT THE SAME TIME GRAB THE
PLASTIC PLATE AND ROLL THE UNIT UP. HOLD IN PLACE AND REPLACE
THE WASHER AND NUT AND TIGHTEN

EXAMPLE PICTURES ARE THROTTLE SIDE


CLUTCH SIDE

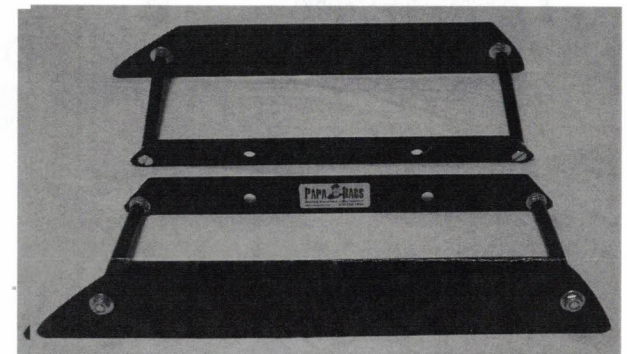

THROTTLE SIDE

THE LONGER POINT OF THE PLASTIC
ARE TO THE BACK OF THE BAG

3

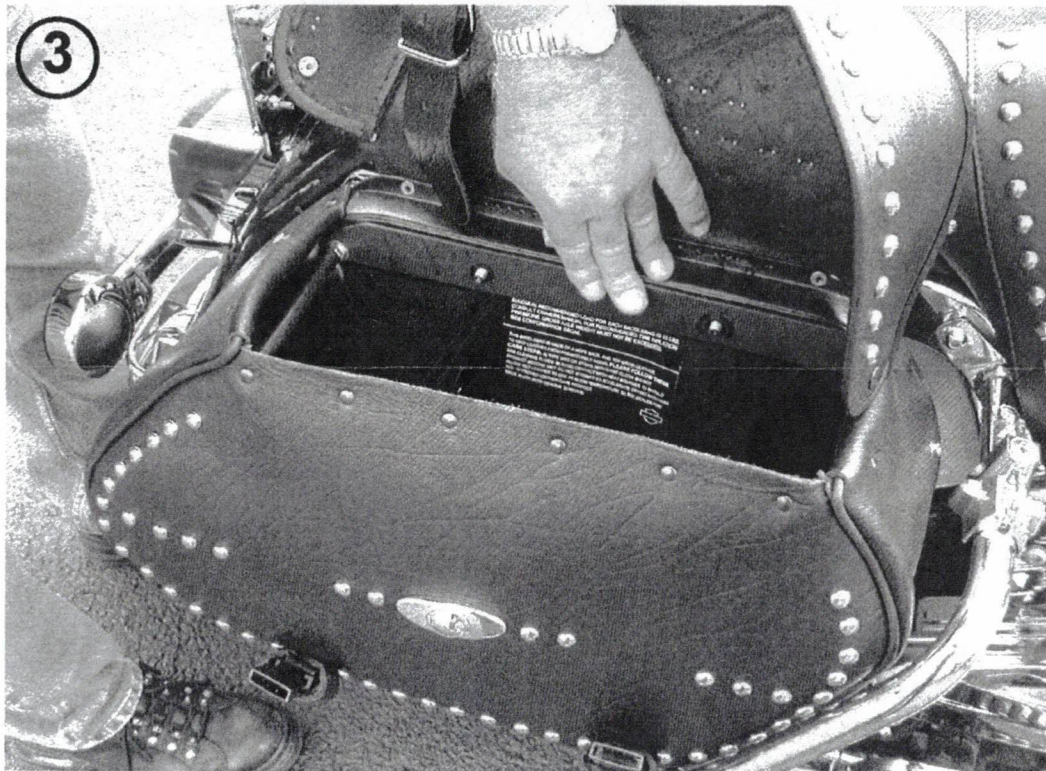

www.papabags.com

P.O. Box 1673 • Medina, OH 44258

330-242-1588

Patent Pending